


SMT1 Autotester Screens

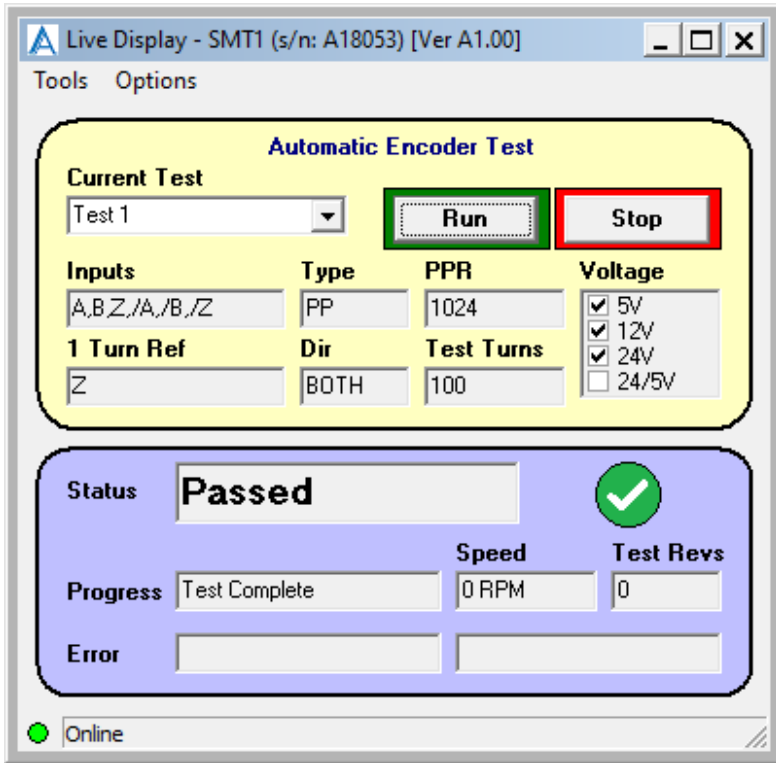

Live Display - SMT1 (s/n: A18053) [Ver A1.00]

Tools Options

Automatic Encoder Test

Current Test
 Test 1 Run Stop

Inputs	Type	PPR	Voltage
A,B,Z./A./B./Z	PP	1024	☒ 5V
1 Turn Ref	Dir	Test Turns	☒ 12V
Z	BOTH	100	☒ 24V
			☐ 24/5V


Status **Passed** 

Progress Test Complete **Speed** 0 RPM **Test Revs** 0

Error

 Online

Figure 1: Autotester Pass Screen

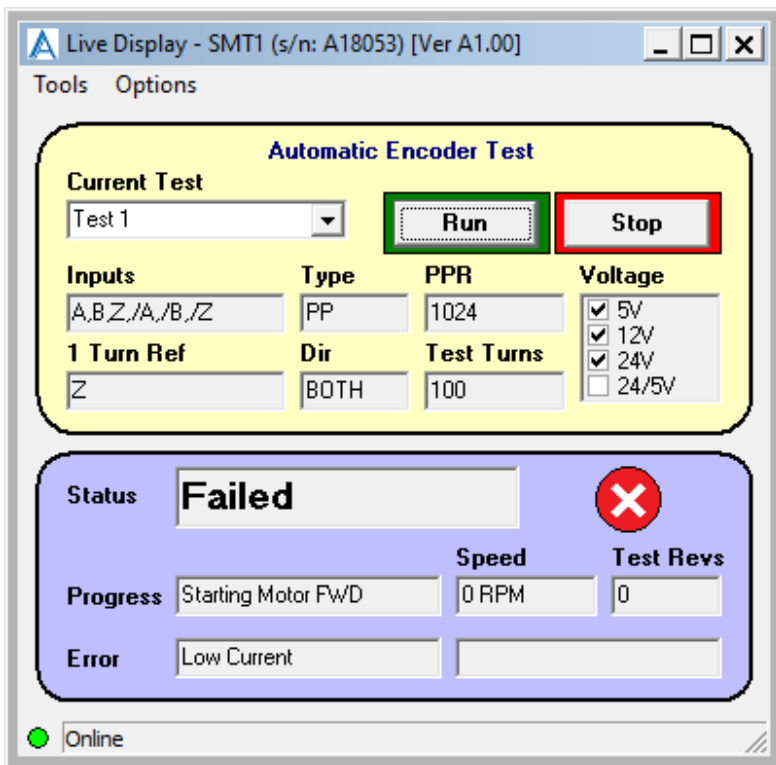

Live Display - SMT1 (s/n: A18053) [Ver A1.00]

Tools Options

Automatic Encoder Test

Current Test
 Test 1 Run Stop

Inputs	Type	PPR	Voltage
A,B,Z./A./B./Z	PP	1024	☒ 5V
1 Turn Ref	Dir	Test Turns	☒ 12V
Z	BOTH	100	☒ 24V
			☐ 24/5V

Status **Failed** 

Progress Starting Motor FWD **Speed** 0 RPM **Test Revs** 0

Error Low Current

 Online

Figure 2: Autotester Fail Screen